


# VISIONLINK<sup>®</sup>

## CONFIGURE ASSET VISIBILITY RULE

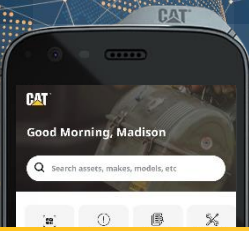

## GETTING STARTED IN VISIONLINK<sup>®</sup>

The VisionLink<sup>®</sup> Fluid Analysis space is expanding in 2025. To ensure a smooth transition to VisionLink Fluid Analysis powered by S•O•S<sup>SM</sup> Services, **start preparing today!**



Please note, VisionLink supports the ability to restrict asset visibility to a subset of customer users within your organization.

## HOW THE ASSET VISIBILITY RULE WORKS:

Customer users with VisionLink Administrator access can modify asset visibility rules for individuals with Standard or Read Only access by navigating to Manage > Users.



+ Click the "Invite" button, add the user information, and select the pencil icon in the Asset Visibility column.

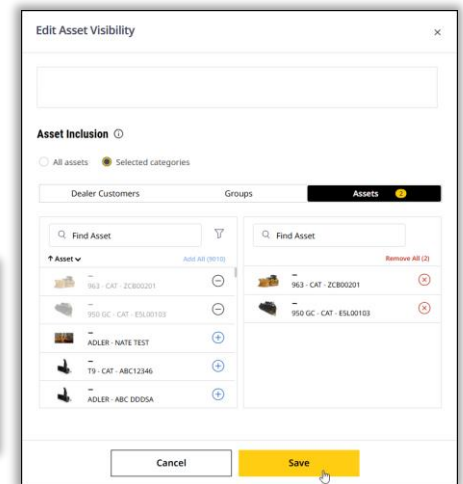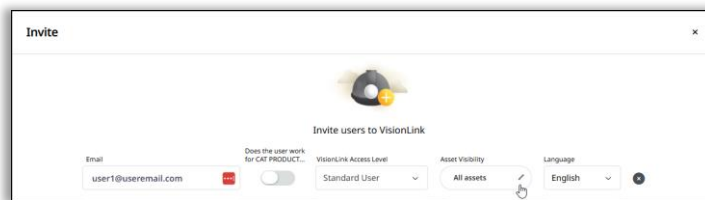

+ Navigate to Manage > Users page.

+ Select the required Asset Inclusion option and configure the asset visibility settings.

For more information on Asset Visibility, see the VisionLink Help Center for guided tours and FAQs:

- + Configure Asset Visibility Settings Tour
- + [FAQs > What is Asset Visibility?](#)

