


# VISIONLINK<sup>®</sup>

## CONFIGURE GROUPS

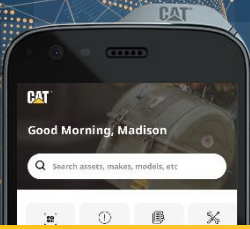



## GETTING STARTED IN VISIONLINK<sup>®</sup>

The VisionLink<sup>®</sup> Fluid Analysis space is expanding in 2025. To ensure a smooth transition to VisionLink Fluid Analysis powered by S•O•S<sup>SM</sup> Services, **start preparing today!**

Please note, SOS Services support assets organized by Job sites. In VisionLink terms, the assets can be organized by groups.

## HOW TO CONFIGURE GROUPS:

You or your dealer can create and configure Groups from the Manage > Groups area of VisionLink.

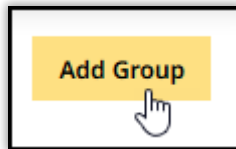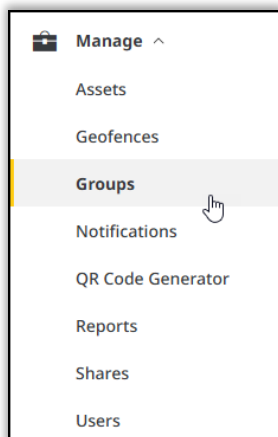

+ Click the "Add Group" button.

+ Follow instructions in the configuration window.

**Add Group**

**Setup**

Group Name  
Fluid Analysis Group 1 22 / 100

Description (optional) 0 / 500

**Privacy**

Public (Visible to all users within my organization)

Private (Only visible to me)

+ Navigate to Manage > Groups page.

? For more information on configuring Groups, see the VisionLink Help Center for guided tours and FAQs:

- + Manage Groups Tour
- + Mark a Group as a Favorite Tour
- + [FAQs > How do I create a group?](#)

